


# KITCHEN SINK STRAINER

Cat. No.  
15587



## INSTALLATION INSTRUCTIONS

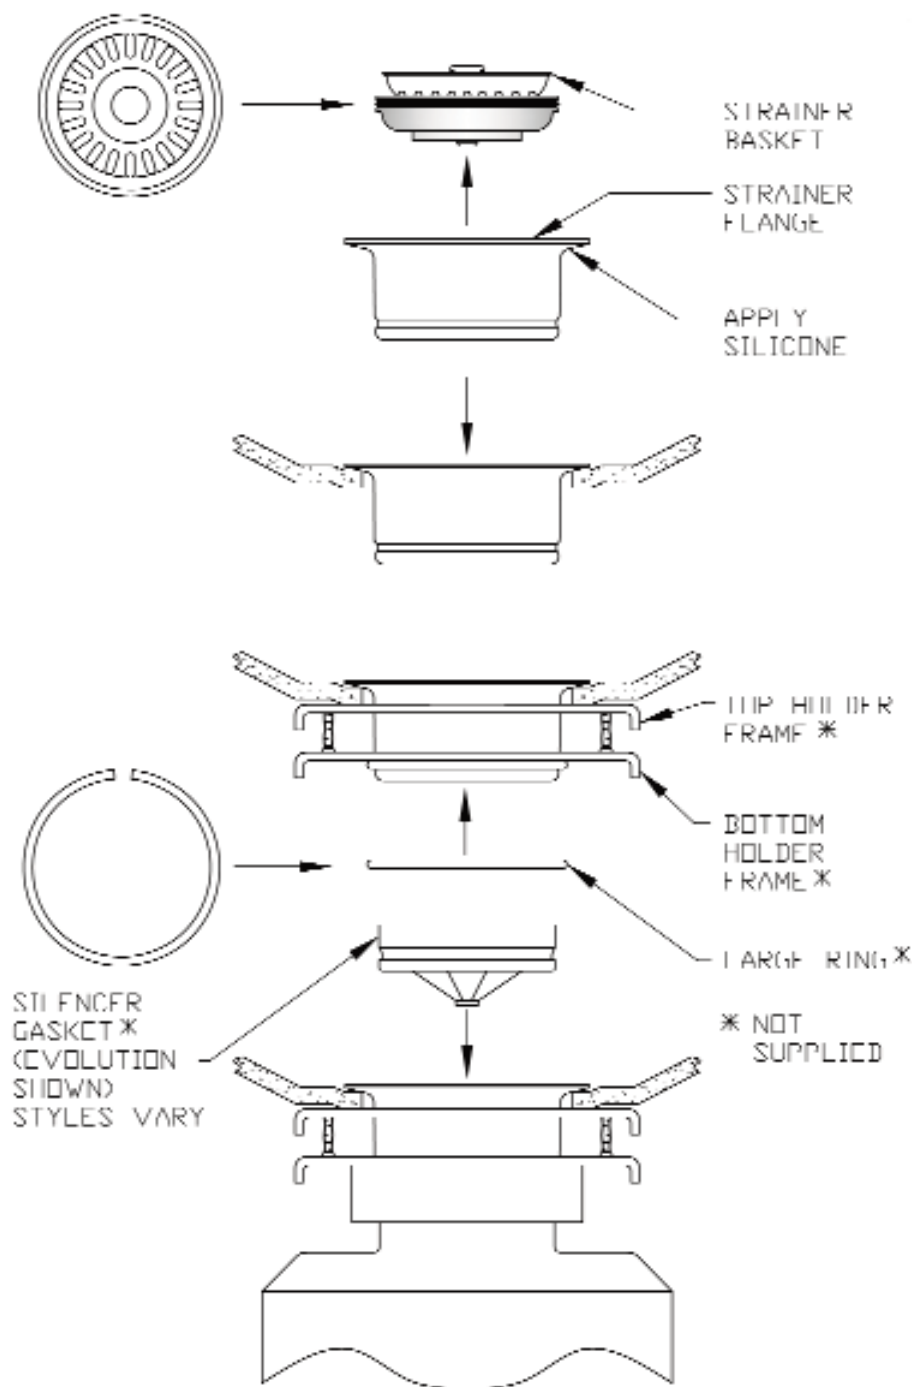

- ① READ THE INSTRUCTIONS FOR THE WASTE DISPOSER FULLY BEFORE INSTALLING THE STRAINER ASSEMBLY.
- ② REMOVE THE BASKET. APPLY A SMALL AMOUNT OF NON-ACID SILICONE UNDER THE RIM OF STRAINER FLANGE AND PUSH DOWN INTO SINK.
- ③ SLIDE THE TOP DISPOSER HOLDER FRAME AND THE BOTTOM HOLDER FRAME WITH SCREWS ONTO THE FLANGE BOTTOM. VERIFY THE FLANGE IS IN THE CENTER OF THE SINK HOLE AND TIGHTEN SCREWS.
- ④ INSTALL THE LARGE RING INTO THE GROOVE OF THE FLANGE. MAKE SURE IT SNAPS FULLY INTO THE FLANGE GROOVE.
- ⑤ COMPLETE WASTE DISPOSER INSTALLATION.
- ⑥ INSTALL EVOLUTION SILENCER GASKET FULLY SUCH THAT THE GASKET GROOVE SNAPS ONTO THE FLANGE BEAD. OTHER DISPOSER STYLES WILL VARY.
- ⑦ REPLACE THE STRAINER BASKET.

## FINISH CARE AND MAINTENANCE

DO NOT USE ANY HARSH ACID BASED DETERGENTS OR CLEANERS SUCH AS SUDS SCRUB® SCRUBBING BUBBLES® OR COMET® TO CLEAN. USE ONLY A DAMP SOFT CLOTH. STANDARD WINDOX® CAN ALSO BE USED SPARINGLY. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLEANERS WILL HELP PRESERVE FINISH.

## WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.